

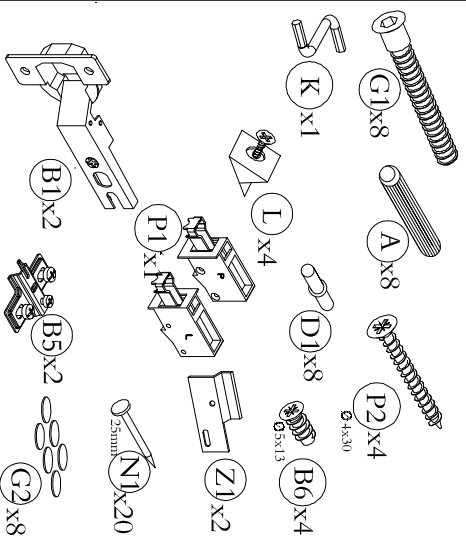


CAMPARI W3-W6 L/P

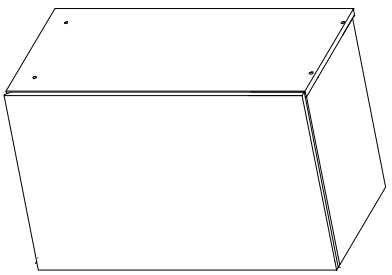


1.

W3- W6 L

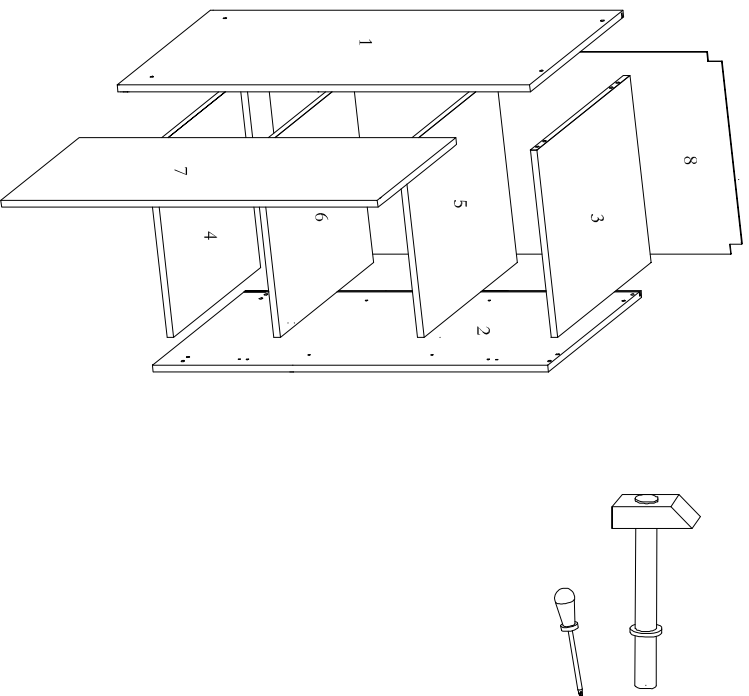


1/4


2.

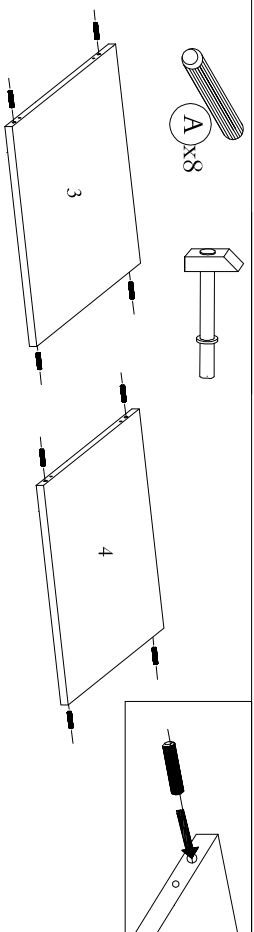



3.

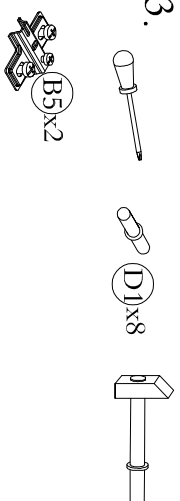



W3- W6 P

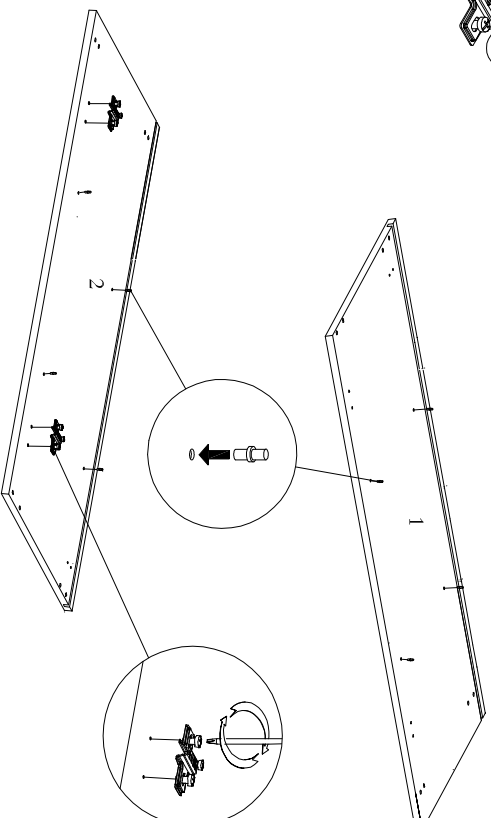

4.

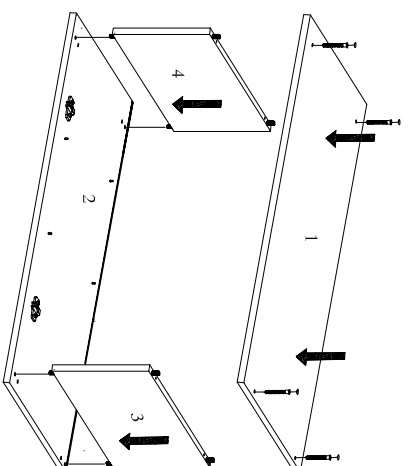



5.



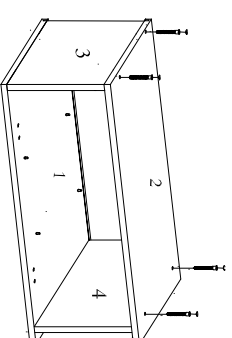


2/4




6.

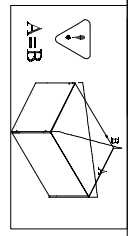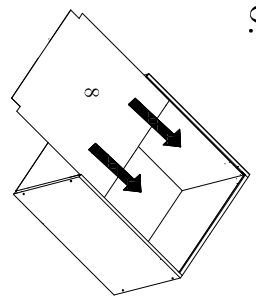

7.1

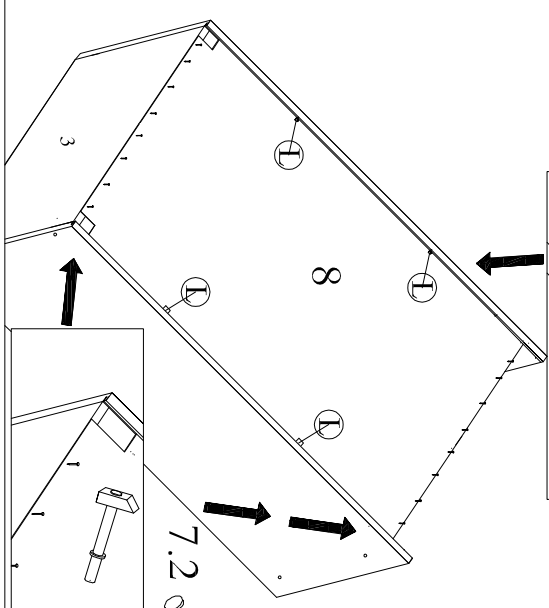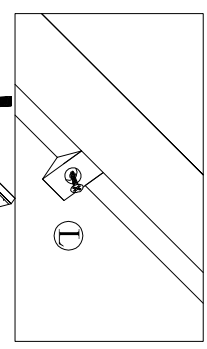



7.







W3-W6 P

W3-W6 L

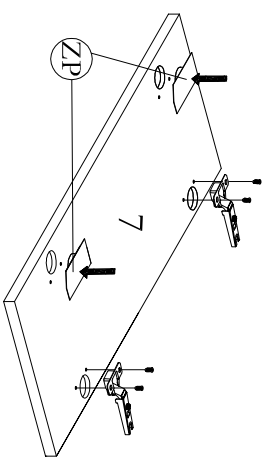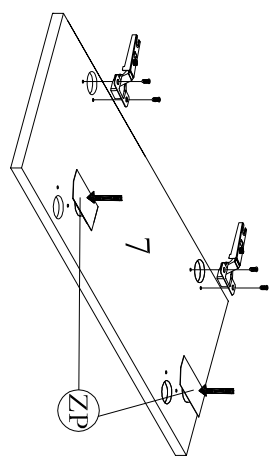


3/4





8.

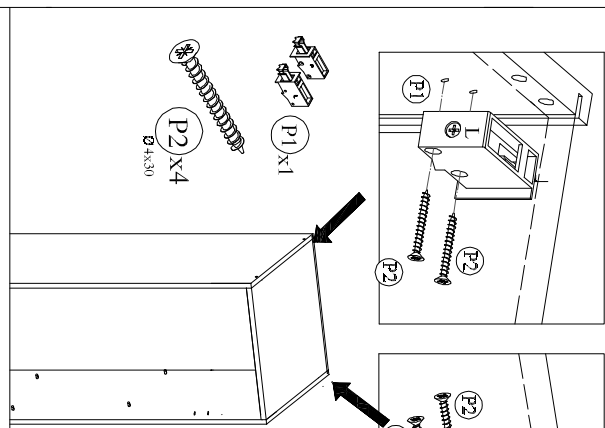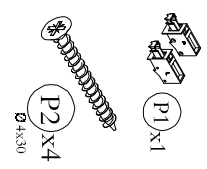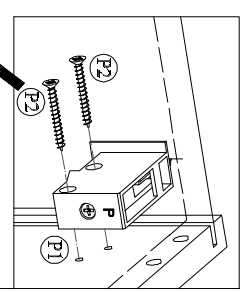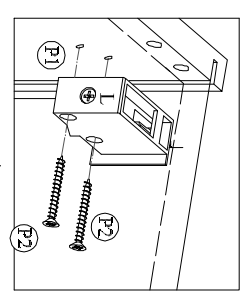


9.

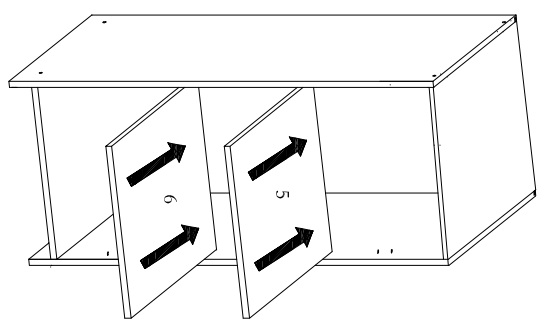

10.

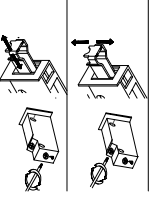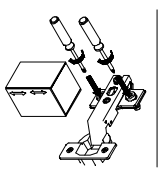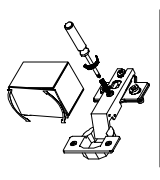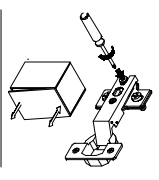

W3-W6 P

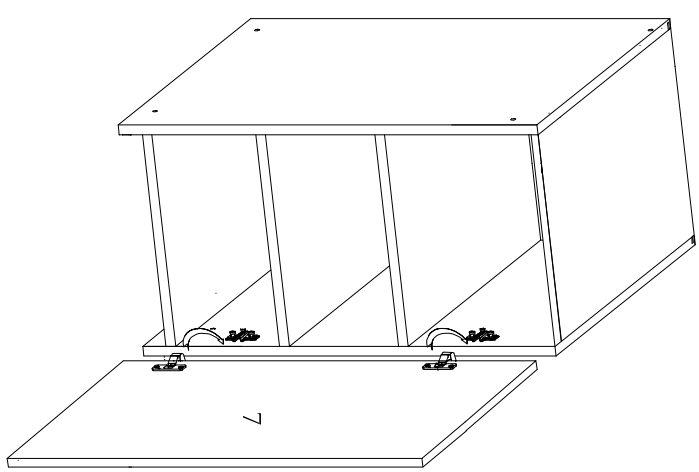

7

4/4