

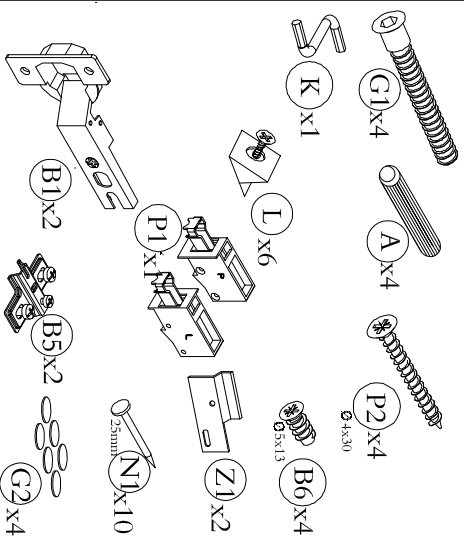


CAMPARI WS6 L/P

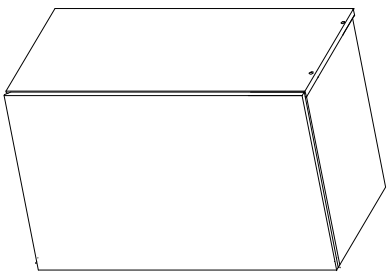




1.

WS6 L

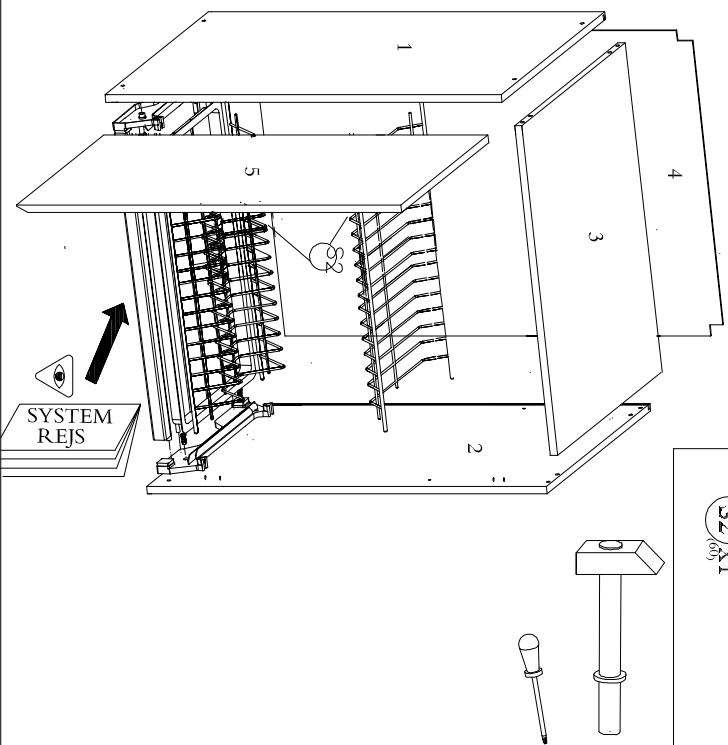


1/4

2.

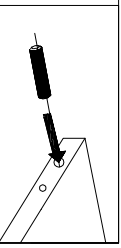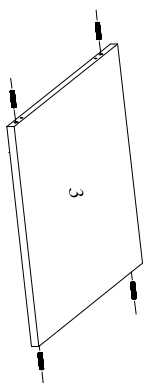


3.


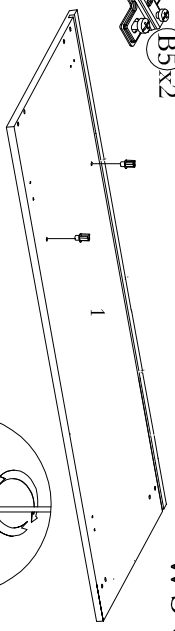


WS 6/86 P

4.


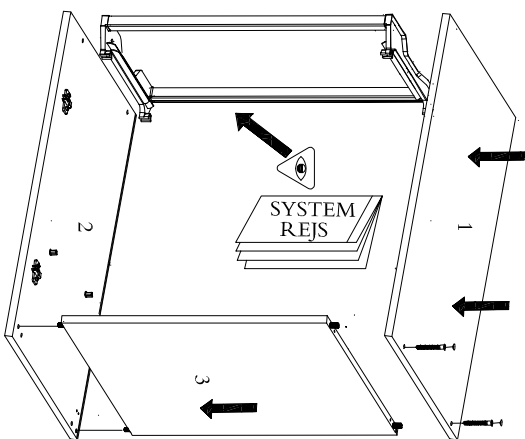


5.



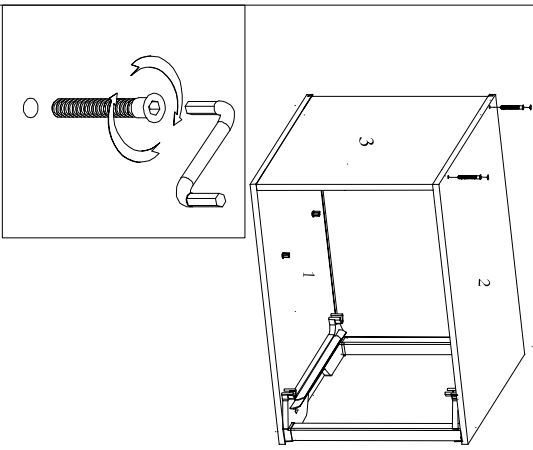



2/4

6.

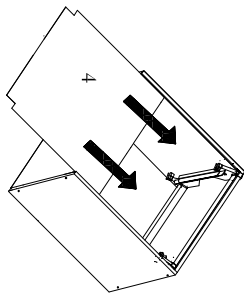


6.1

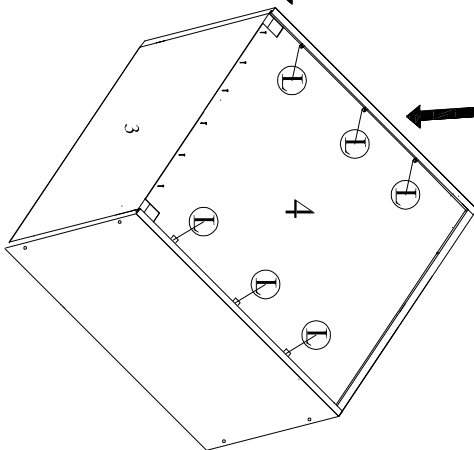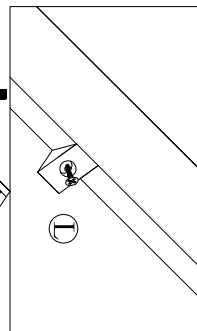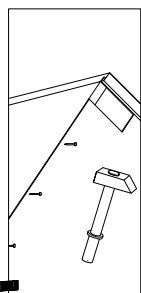



7.

WS6 P







WS6 L

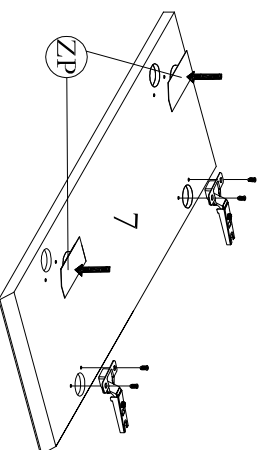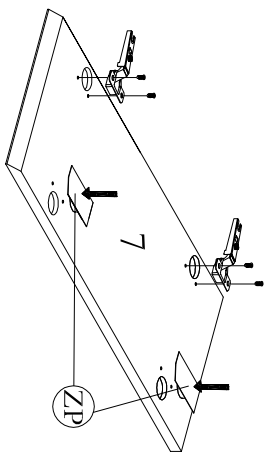


3/4

8.

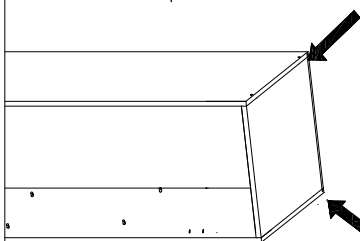
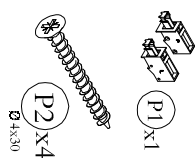
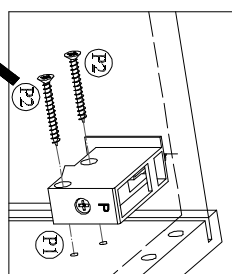
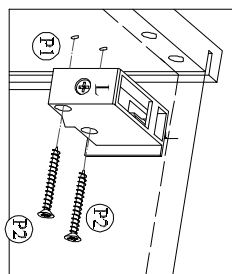


9.

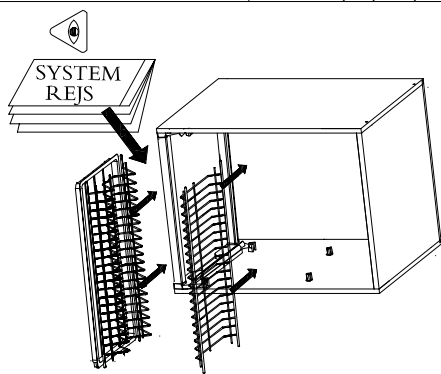

10.

WS6 P

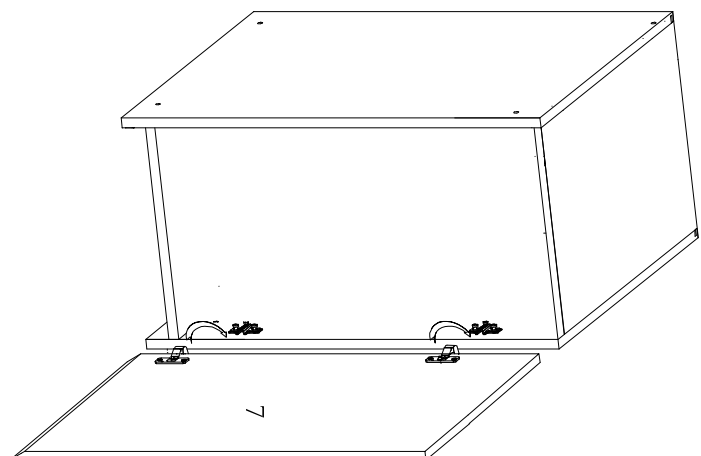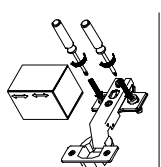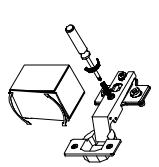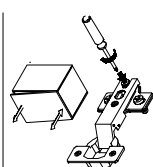

4/4