

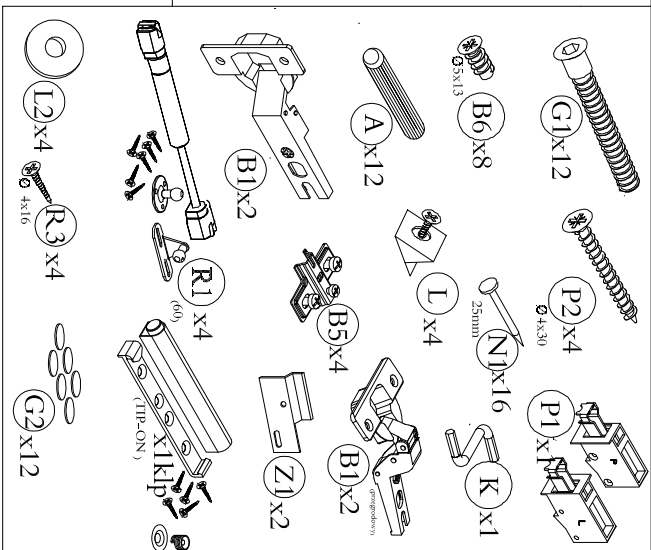


CAMPARI

WOW6/72-WOW9/72

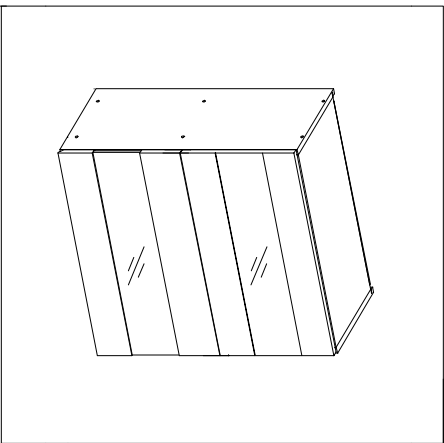


1.

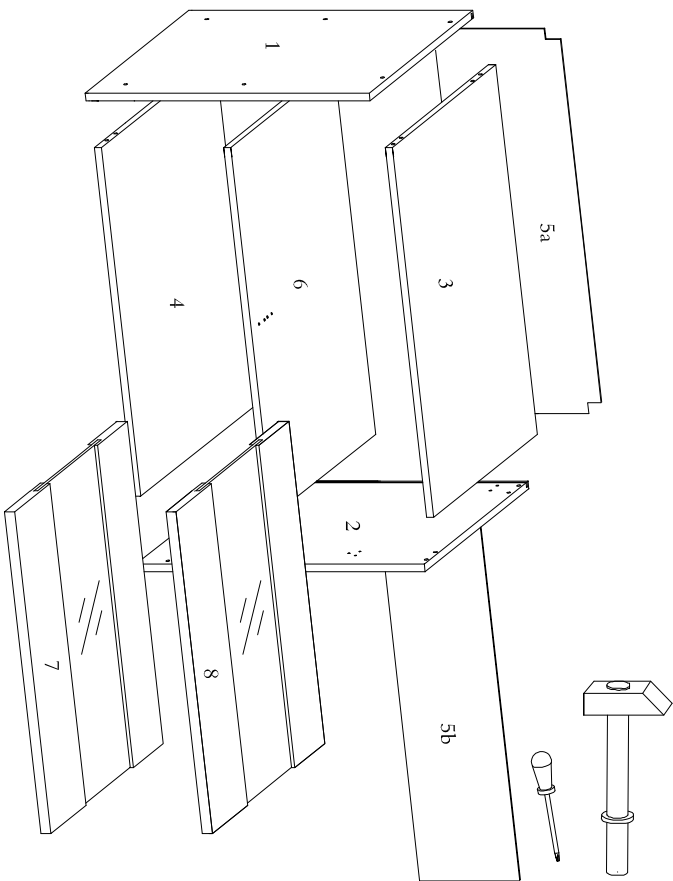


1/4

2.

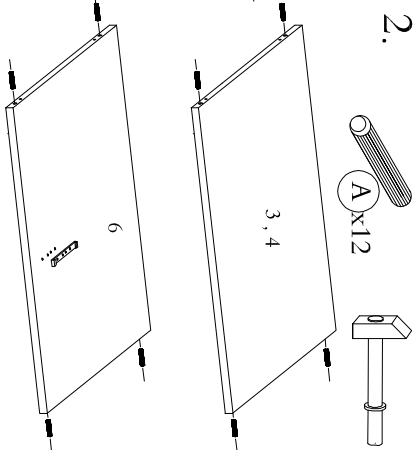


3.

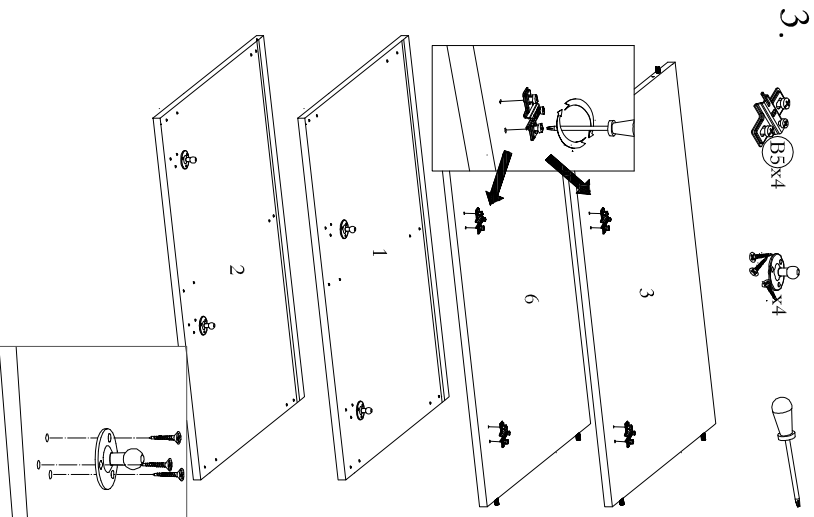


2.1




2.2

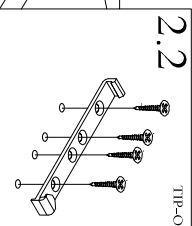


2.3

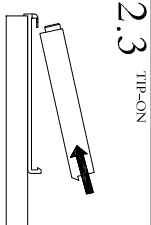


2.4

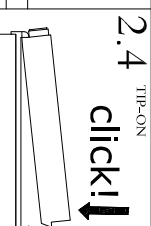

4.1


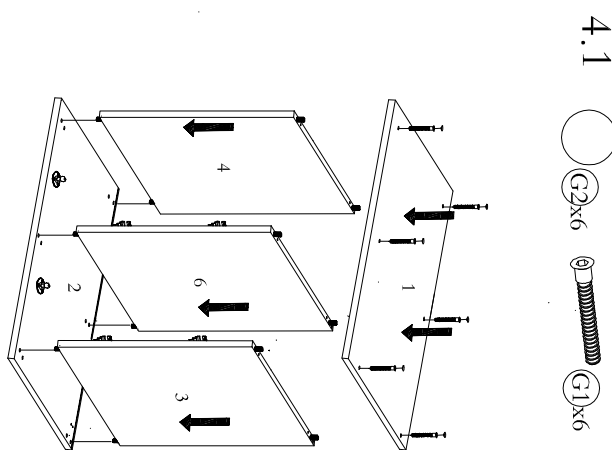


4.2


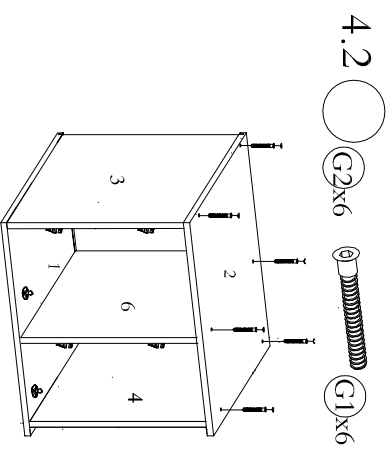


2/4



5.

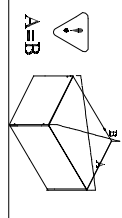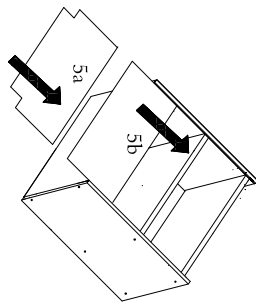



5.1

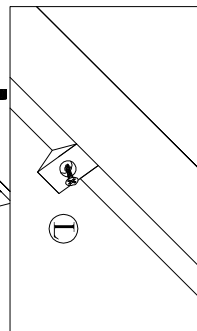






5.2 (N1)

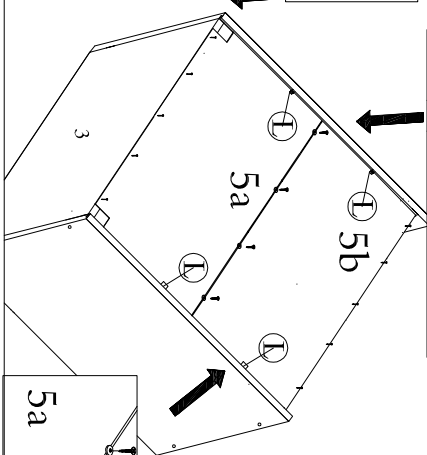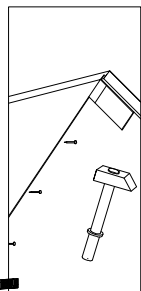

5.3

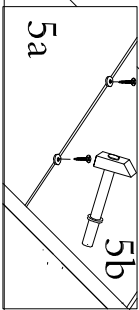
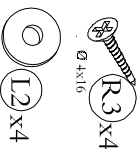


6.

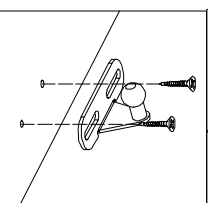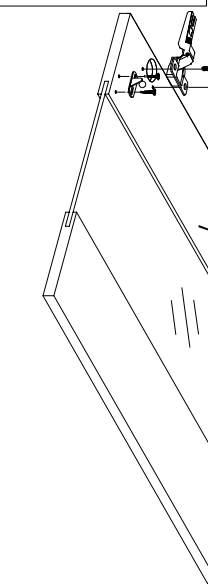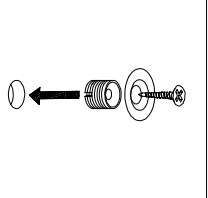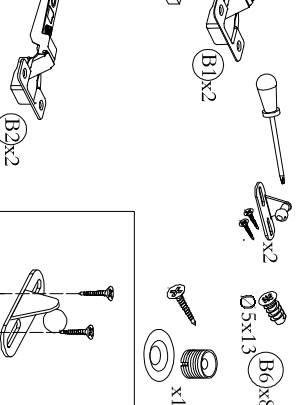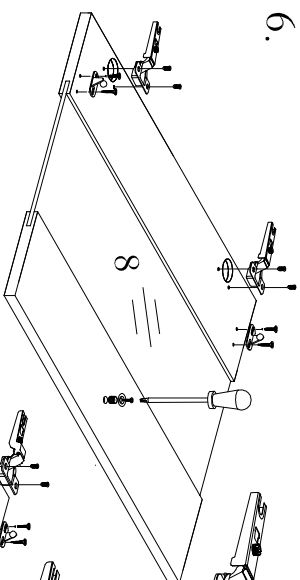


3/4



7.

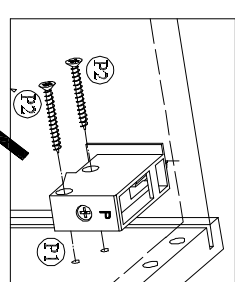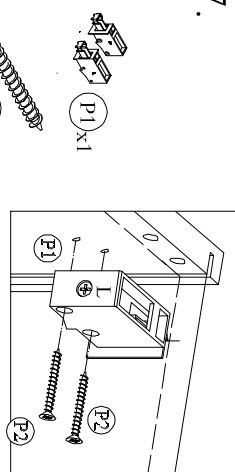



P1 x1 (screw), P2 x4 (screws), D x x30 (screw), and a screwdriver.

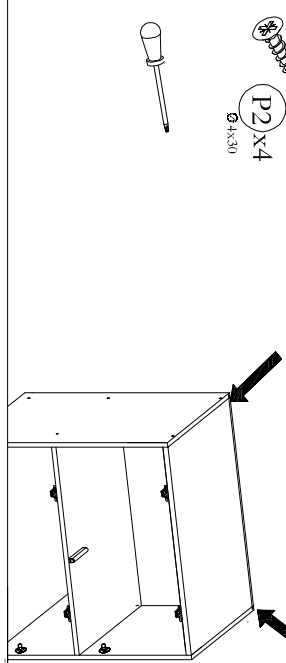

8.1

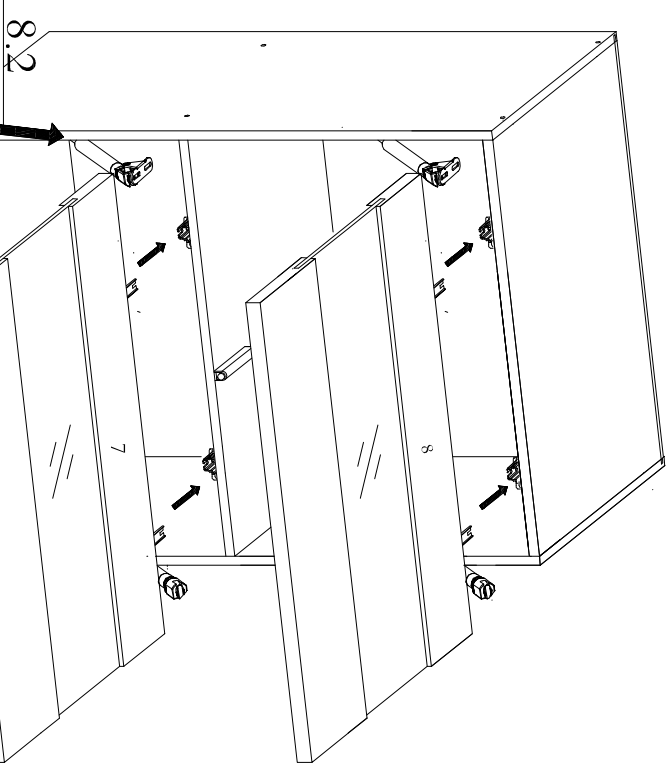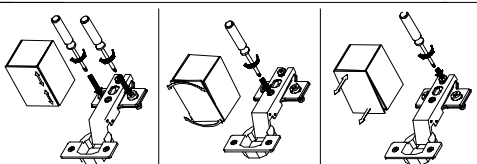

8.2

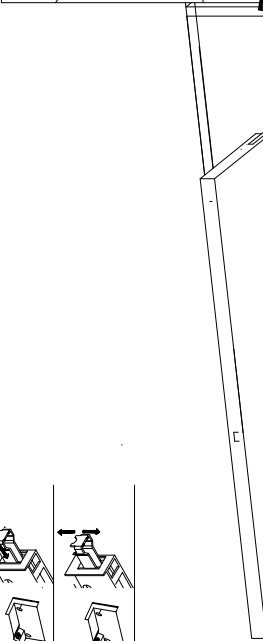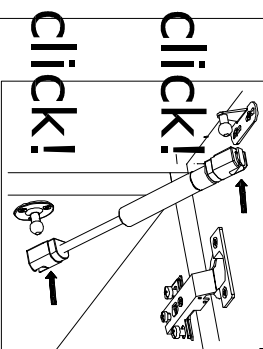

4/4