

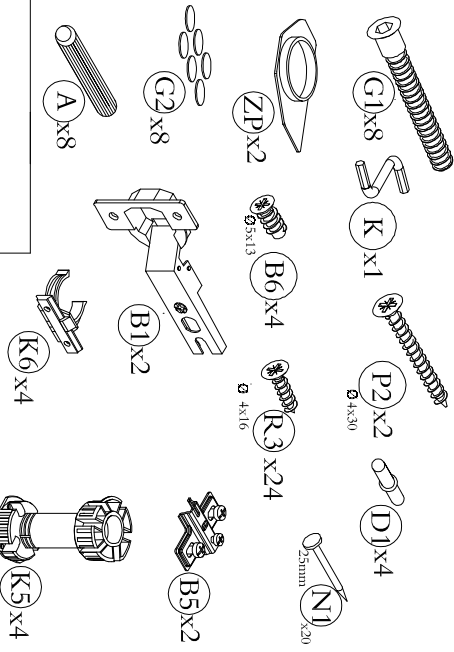
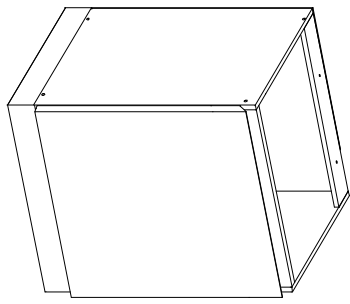
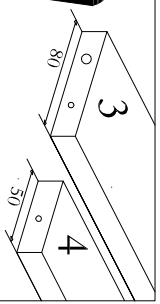






CAMPARI D3-ID6

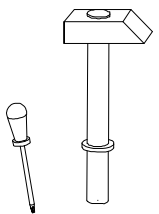


1.

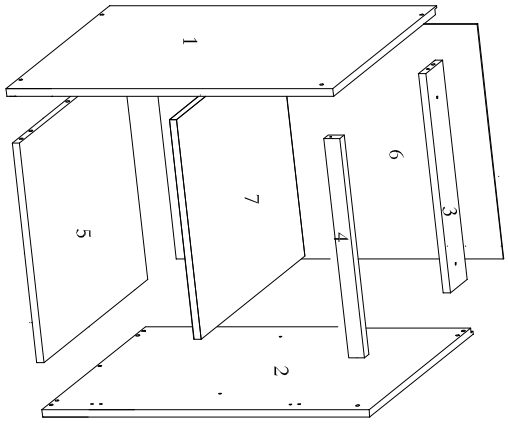


1/4

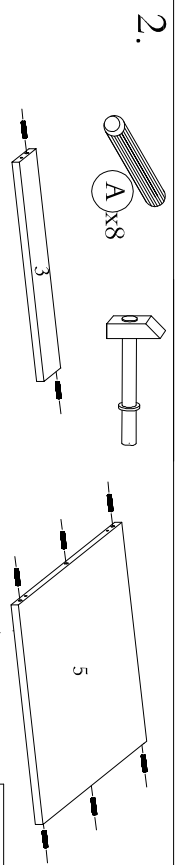


2.

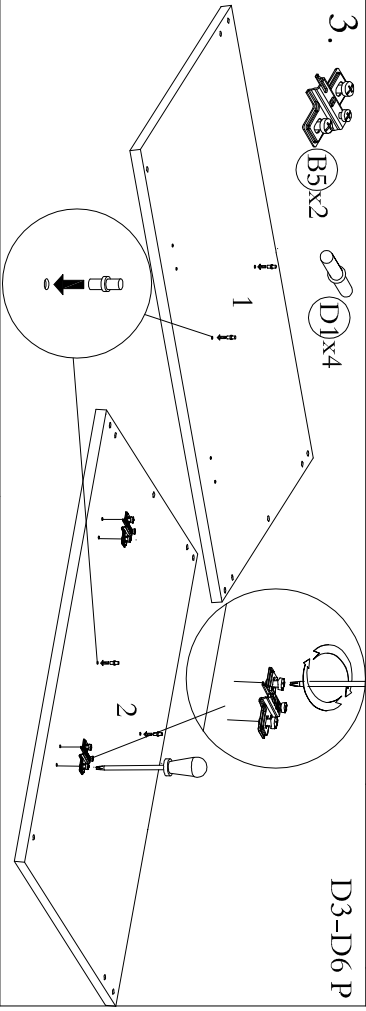



3.

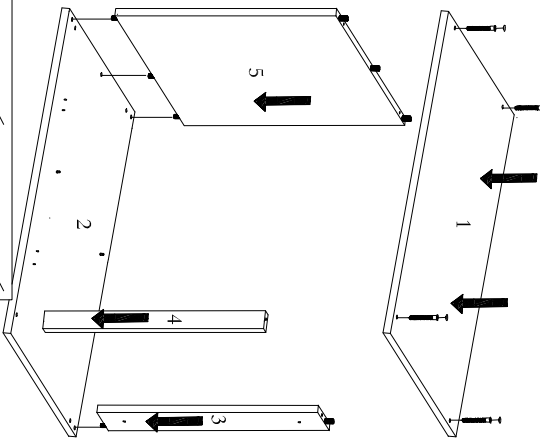







4.

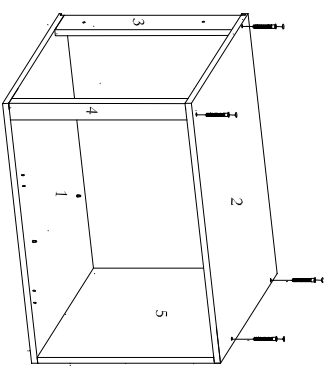

5.



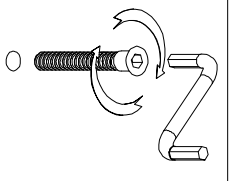
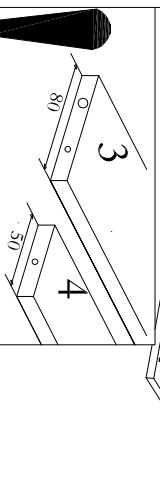


2/4

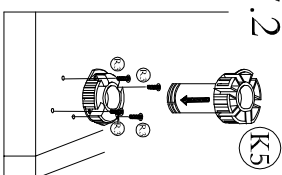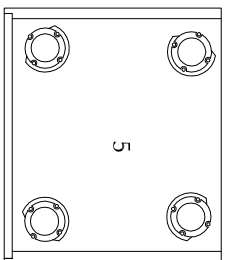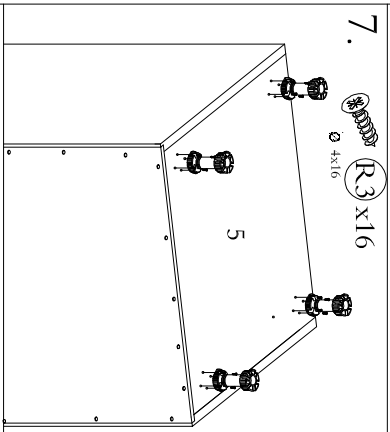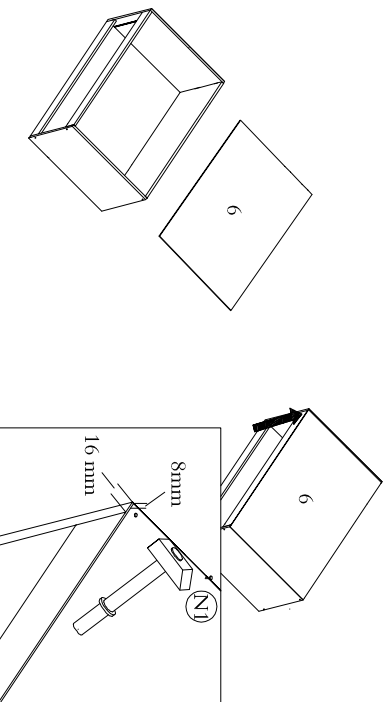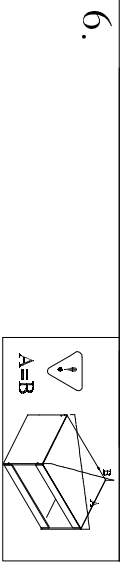


D3-D6L


D3-D6P

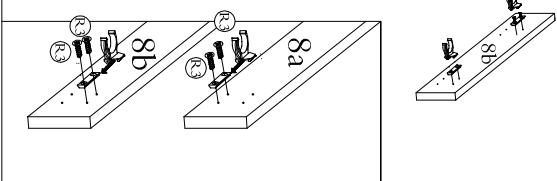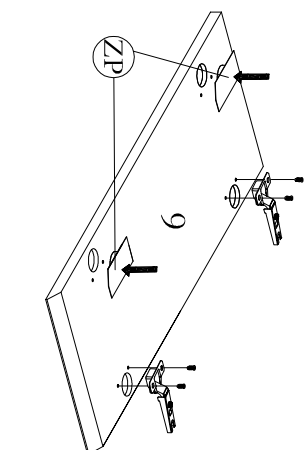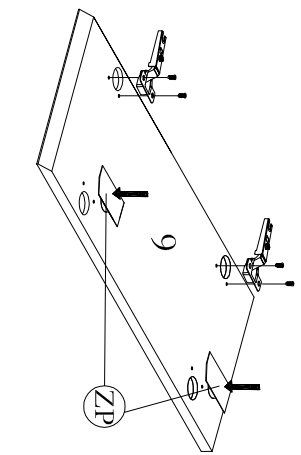



10.1

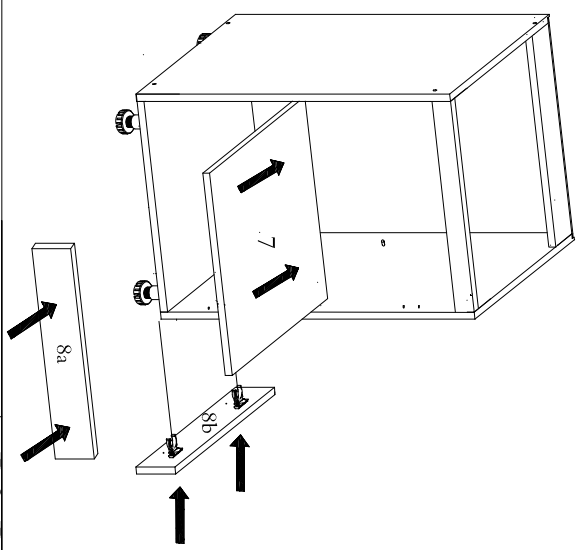

11.

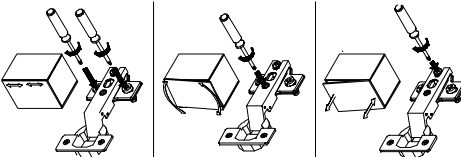

D3-D6L

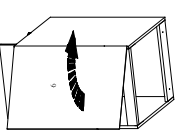

Ø4x30